



HOW TO USE BARRIER™ AS A LANDSCAPE EDGING

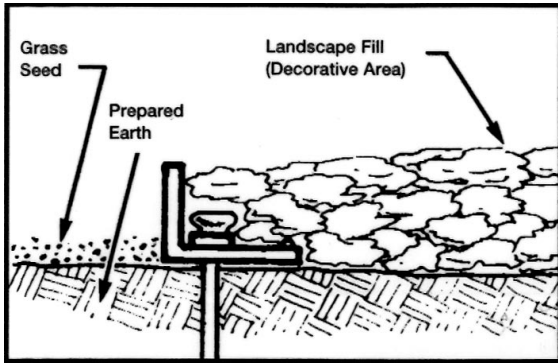

Installing BARRIER™ with New or Existing Lawns


1. Install BARRIER by placing it, as shown, on “prepared” earth that is smoothed, graded, and ready for seeding. For existing lawns, cut
2. BARRIER’s nail boss areas should be facing
3. Spike BARRIER in place using 3/8” diam. nails driven through the nail hole bosses. Space nails every 12” to 24”.
4. For new lawns, spread seed following directions. Avoid seeding areas set aside for

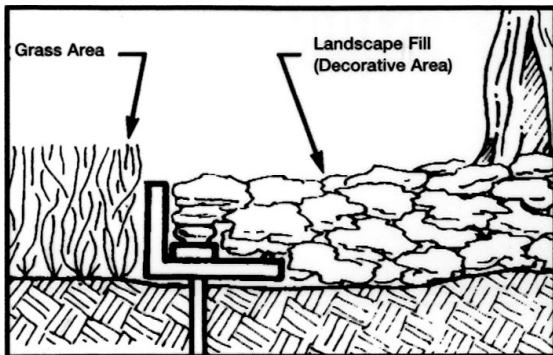

Installing BARRIER™ as a Tree Ring


1. Remove the grass down to earth level in the desired area surrounding the tree base.
2. Snip the back supports and bend BARRIER until it forms the proper border around the tree.
3. Spike BARRIER in place, using 3/8” diam. nails driven through the nail hole bosses. Space nails every 12” to 24”.

Trim Sod to BARRIER Border

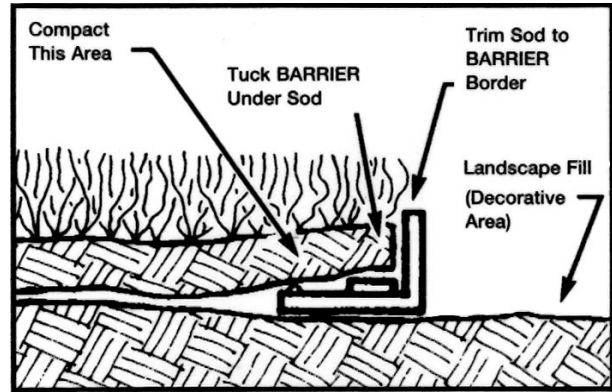

Installing BARRIER™ with Sod (no nails)

1. Install BARRIER by placing it, as shown, on prepared earth that is smoothed, graded, and ready for sod.
2. Position BARRIER with its nail boss facing out, toward the sod area.
3. Cover BARRIER’s horizontal surface with sod.
4. Once the sod is in place, add the landscape

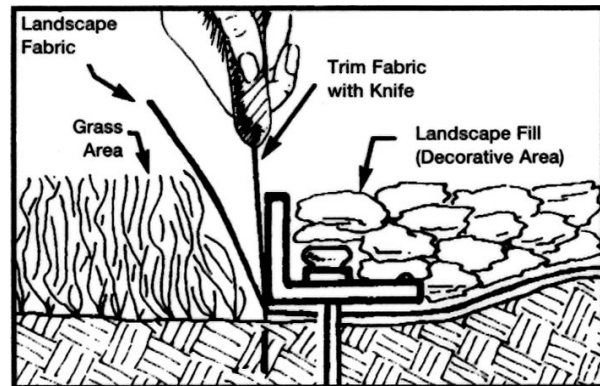

Installing Landscape Fabric with BARRIER™

1. Remove all grass down to earth level in the
 2. Lay the landscape fabric over decorative area with excess fabric extending over the lawn area.
 3. Place BARRIER on top of the landscape fabric, creating the desired border. Snip and bend supports to create curves.
 4. Spike BARRIER in place, using 3/8” diam. nails driven through the nail hole bosses. Space nails every 12” to 24”.
- Trim Fabric with Knife

